

Quickstart Guide

Catalytic Bead Sensor



P/N 10-0247 Stainless Steel Sensor Head
 P/N 10-9070 Catalytic Bead Smart Sensor Module


CAUTION: Catalytic Bead sensors must be balanced and calibrated after installation. Refer to the instruction manuals for the specific controllers involved. Periodic calibration is required to maintain rated accuracy.

Sensors must be installed in accordance with distance limitations published in the individual controller manuals.

Sensors are designed to be mounted vertically as shown, supported by the 3/4" NPT thread. Mounting in any other orientation may lead to sensor failure or incorrect readings. Alteration of the assembly may compromise the explosion-proof nature of the assembly.

Do not paint the sensor assembly.

Unless protected with a P/N10-0198 Splash Guard, protect the sensor assembly from dripping liquids or high power sprays.

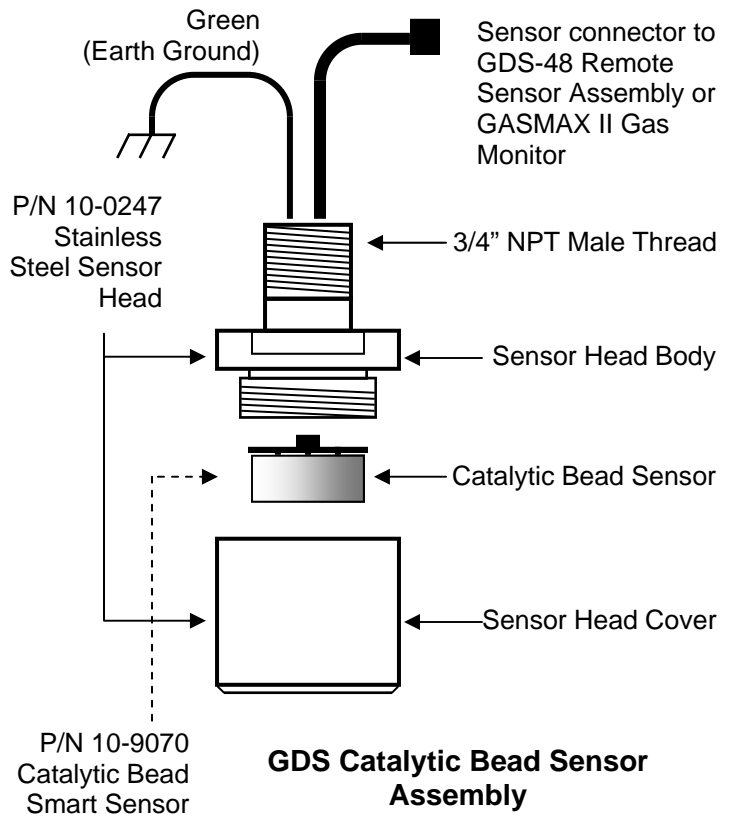

GDS Catalytic Bead Sensor Assembly

FOR REPLACEMENT PARTS, ORDER GDS PART NUMBER:

10-0247	Stainless Steel Sensor Head
10-9070	Catalytic Bead Smart Sensor Module
10-0198	Sensor Splash Guard with Remote Cal Port
10-0203	Sensor Calibration Cup
10-0205	Sensor Flow Cell for Process Applications
10-0187	Sensor Replacement Tool Kit
10-0193	Remote Sensor Head Junction Box

CAUTION!

Normal sensor excitation voltage is 2.0 volts.

Never exceed 2.2 volts across sensor input at any time with sensor in place.

Consult GDS-48 or GASMAX manual for detailed instructions

Voltage in excess of 2.2 volts may destroy the sensor.

**IMPORTANT
DO NOT DISCARD**



**SENSOR
INSTALLATION NOTES**