
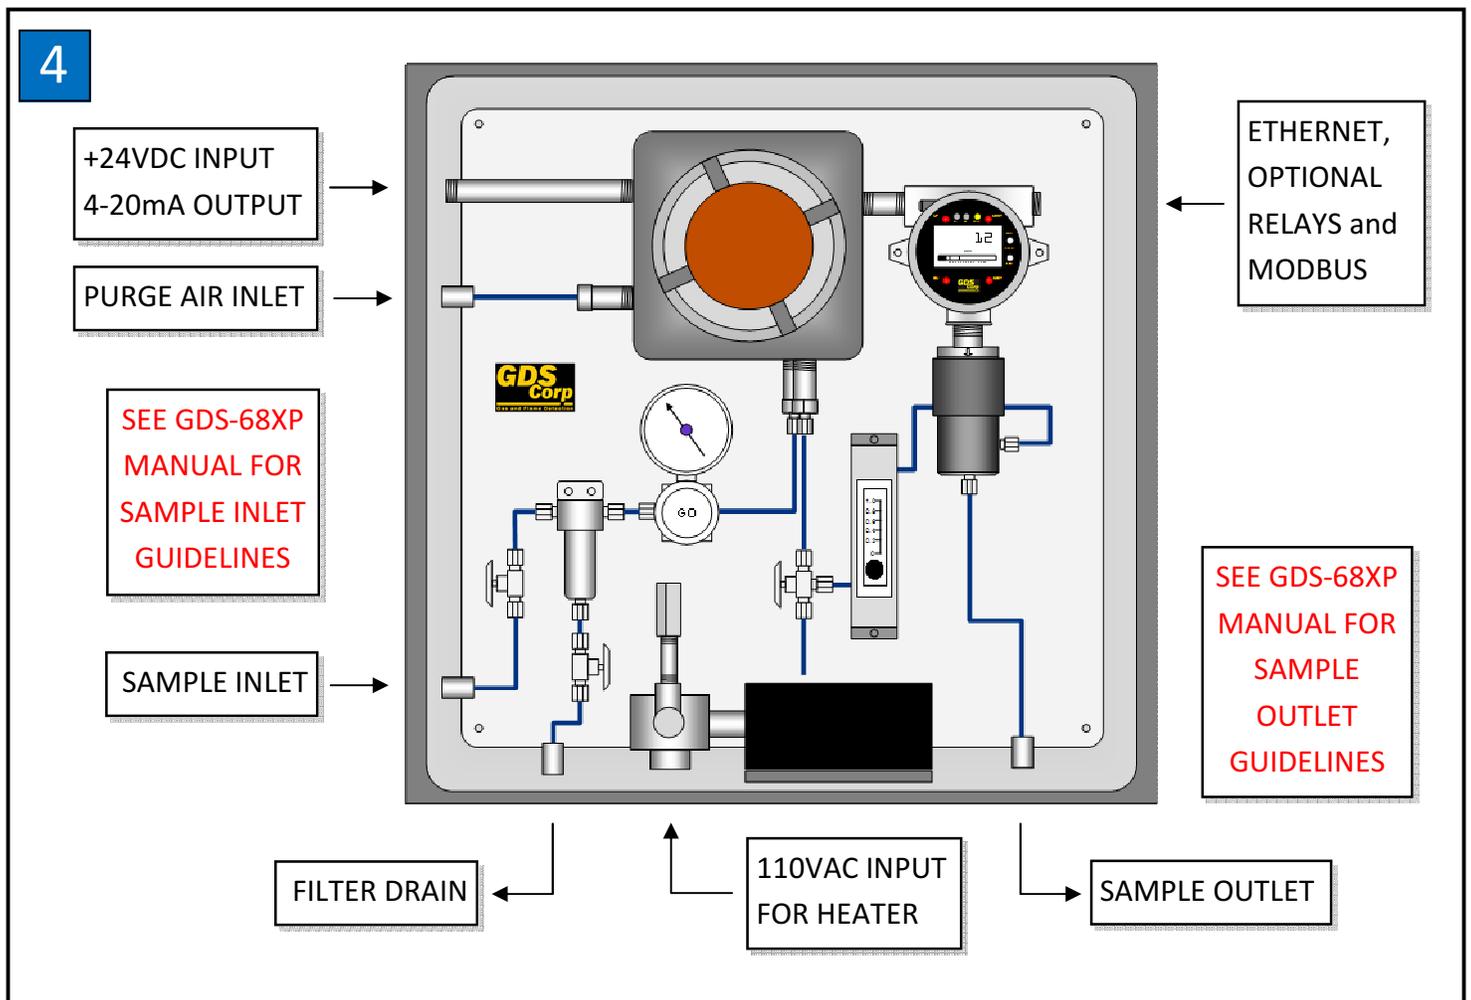
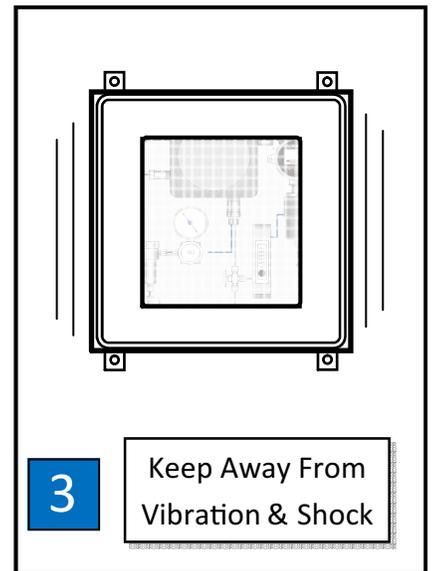
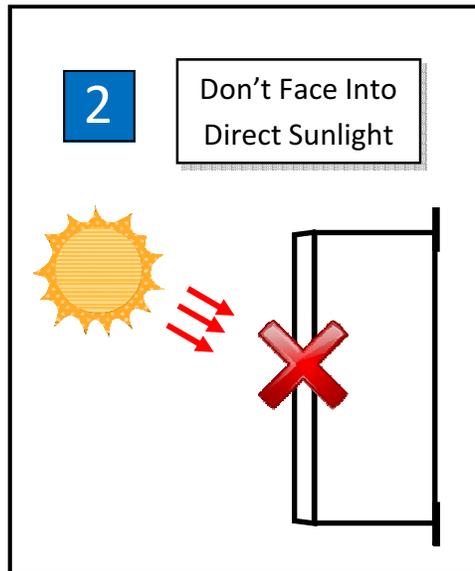


GDS-68XP QuickStart Guide

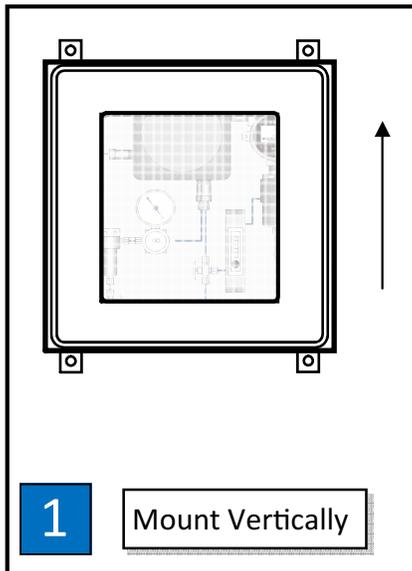

AUTHORIZED DISTRIBUTOR - GasDetectorsUSA.com - Houston, Texas USA

sales@GasDetectorsUSA.com - 832-615-3588

GDS-68XP Sensor Replacement

Step 1: Disconnect DC Power

Step 2: Disconnect flow cell inlet

Step 3: Disconnect flow cell outlet

Step 4: Unscrew sensor head cover and flow cell together

Step 5: Pull sensor straight down to remove (do not twist).

Step 6: Verify new sensor part number against existing sensor.

Step 7: Align arrow on new sensor with engraved arrow on sensor head and push straight up.

Step 8: Carefully reassemble sensor head cover / flow cell and reattach inlet and outlet tubing. Make sure outlet tubing does not touch heater.

Step 9: Apply DC power and allow sensor to stabilize (see manual).

Step 10: Recalibrate.

