

Digital Central Supervisory Alarm Panel TO MACURCO GD-6

NOTE;

- 1) Remove GD-6 plugs before attaching the wires.
- 2) Ensure GD-6 wires are secure before plugging them into the GD-6.
- 3) Ensure power is off before doing any wiring to the DCSAP or GC-6
- 4) Verify all wiring before applying power.
- 5) DCSAP INPUT CHANNEL range must be set for 500. See page 6 of the DCSAP O&M Manual.



From DCSAP "Wnc" to GD-6 "NC"

From DCSAP "Com" to GD-6 "com"

From DCSAP "Anc" to DCSAP "Com"

From DCSAP "Io" to GD-6 4-20mA +

From DCSAP "Io" to MAMAC channel "IN"

From DCSAP "Gnd" to GD-6 4-20mA - and MAMAC channel "COM"



From DCSAP 24VDC GND
To GD-6 Power

From DCSAP +24VDC
To GD-6 Power