


## Digital Central Supervisory Alarm Panel TO WATCHMAN

## NOTE;

- 1) Remove TB1 And TB2 plugs before attaching the wires.
- 2) Ensure TB1 and TB2 wires are secure before plugging them into the WATCHMAN.
- 3) Ensure power is off before plugging in TB1 and/or TB2.
- 4) Verify all wiring before applying power.

\*\*\*\*\*\* DCSAP RECEIVER\*\*\*\*\*\*

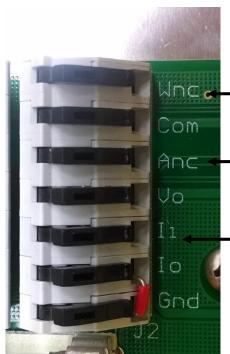

From DCSAP "Wnc" to WATCHMAN TB2 "S2" Green Wire (Wnc=Warning normally closed contact)

(Com=Relay Common)
From DCSAP "Anc" to WATCHMAN TB2 "S1" Orange
wire (Anc=Alarm normally closed contact)

From DCSAP "Il" to WATCHMAN TB1 "S" White wire

I1=Analog Input In (4-20mA)

Authorized Distributor: GasDetectorsUSA.com Houston, TX USA 832-615-3588 sales@GasDetectorsUSA.com

