

Used for Testing FSC Model FS24X and FS18X Detectors

SPECIFICATIONS

FSC Model No.

TL-2055

Portable, Explosion-Proof WideBand™ IR Test Lamp

FM Approved for Class I, Div. 1 & 2 Hazardous Areas

This portable "WideBand™ IR" Test Lamp is used to test "end-to-end" Fire Sentry Corporation (FSC) Model FS24X, and FS18X Multi-Spectrum Electro-Optical Fire and Flame Detectors only and will <u>not</u> test other manufacturers' IR flame detectors. Other manufacturers' IR Test Lamps should not be used to test Fire Sentry Corporation Detectors because Fire Sentry Detectors are designed to <u>reject</u> pulsing test lights as false alarm sources. This indoor/outdoor Test Lamp is powered by rechargeable batteries.

Fire Sentry Corporation Document No. 1505-009- Rev A © Copyright 2008 All Rights Reserved





Fire Sentry Corporation (FSC) TL-2055 Explosion-Proof Test Lamp

Model No. TL-2055 WideBand™ IR Test Lamp – FM Approved Explosion-Proof

General Description:

- > The new TL-2055 is a compact portable, explosion-proof Test Lamp and features plug-in user replaceable parts for long operational life.
- > The WideBand™ IR Test Lamp is designed for use in Class I, Div. 1 & 2 Area Classification indoors or outdoors.
- ➤ The TL-2055 is used <u>only</u> to test Fire Sentry Corporation Model FS24X, and FS18X Multi-Spectrum Fire Detectors "end-to-end".
- ➤ It is powered by a rechargeable, long-life, more capacity, "memory-free" nickel hydride battery pack.

IMPORTANT NOTE: The Model TL-2055 Test Lamp will <u>only</u> activate Fire Sentry Corporation FS24X and FS18X Detectors and will <u>not</u> activate other manufacturers' IR flame detectors. Other manufacturers' IR Test Lamps should not be used to test Fire Sentry Corporation Detectors because Fire Sentry Detectors are designed to <u>reject</u> pulsing test lights as false alarm sources.

- **Source Output Energy:** The gold-plated infrared (IR) reflector lamp generates modulated radiant spectral energy in a broad band of IR wavelengths causing the Detector to ALARM.
- Weight and Size: 4.81 in. diameter x 4.40 in. high and 4 pounds (approx.).
- **Housing:** Copper-free aluminum (less than 0.4%) with powder coated paint finish. Designed to be Explosion-Proof, Class I, Div. 1 & 2, Groups B, C, D; Class II, Div. 1 & 2, Groups E, F, & G, and Class III, NEMA 3, 4 Weather-proof, Tamper-Resistant.
- **Temperature Range:** -30° to +85° C, (-22° to +185° F) Operating and Storage.
- Electrical Connections: To recharge the Test Lamp's internal 12 VDC battery pack, unscrew the top housing cover and connect the AC/DC wall converter supplied by Fire Sentry Corporation. Plug the 110/220 VAC wall charger into a standard 120/220-volt AC receptacle. (Use only the Fire Sentry Corporation AC/DC wall converter, part number PSU-15, which supplies regulated 15 VDC at 1.33 amps.)
- Warranty: One year from date of purchase.
- Notes:
 - **1. Battery Recharging** Recharge the internal battery pack with Fire Sentry's Part No. PSU-15 100 240 VAC wall charger (see above) that includes worldwide interchangeable receptacle plugs. A fully charged battery pack should test typically up to 20 Detectors.
 - **2. FOV Reduction** To reduce the Tester's radiated field-of-view (FOV) for selectively testing Detectors, secure one cylindrical tube around the Tester's front lid. Lengthening the tube correspondingly reduces the Test Lamp's radiated energy field-of-view.
 - **3. Replaceable Parts -** The IR gold-plated reflector lamp and nickel-metal hydride battery pack are user replaceable plug-in parts. If these parts fail, contact Fire Sentry Corporation Customer Service for information on ordering replaceable parts.



Fire Sentry Corporation (FSC) TL-2055 Explosion-Proof Test Lamp

Page 3

Instruction for Using and Maintaining the TL-2055 WideBand™ IR Test Lamp

CAUTION: Avoid looking directly into the Test Lamp when it is operating!

The TL-2055 Test Lamp will only test the Fire Sentry FS24X and FS18X Detectors. This Test Lamp will not calibrate or change the configuration of the Detectors in test. It generates modulated radiant spectral energy in a broad band of IR wavelengths causing the Detector to ALARM.

Testing a Detector:

- 1. Hold the Test Lamp approximately 2 to 30 feet (0.6 to 9.1 meters) directly in front of the Detector. Distances may vary with ambient light levels especially in outdoor installations. Some practice may be required to find the optimum distance.
- 2. Depress the pushbutton (momentary) switch to turn ON the Test Lamp and the Test Lamp's gold-plated reflector lamp source will flash on and off repeatedly and its UV source bulb will illuminate.
- 3. Hold steady for about 3-6 seconds or until the Detector goes into ALARM (red LEDs on the Detector will illuminate and the ALARM relay will activate).
- 4. Turn OFF the Test Lamp by depressing the pushbutton (momentary) switch again.
- 5. Repeat the procedure for testing "end-to-end" other FSC FS24X/FS18X Multi-Spectrum Detectors.

Charging the Test Lamp:

The Test Lamp has a rechargeable metal nickel hydride battery pack and will require charging after extended use. A 110 / 220 VAC wall charger with interchangeable receptacle plugs for worldwide use is supplied with the Test Lamp. To charging the battery pack, the housing window lens cover must be removed from the Test Lamp. This procedure MUST be done in a non-hazardous area. To charge the battery pack:

- a) Unscrew the front housing window lens cover counterclockwise and remove it.
- b) Make certain that the Test Lamp is OFF or the battery pack will not charge.
- c) Plug the wall charger's output connector into the power receptacle in the front faceplate of the Test Lamp.
- d) Plug the wall charger into an AC power outlet; the red LED on the face of the Test Lamp will turn on.
- e) Allow 3 to 4 hours for complete charging. Use ONLY the wall charger supplied by Fire Sentry Corporation.


Maintenance:

- 1. Make certain that the Test Lamp is fully charged before each use.
- 2. Handle the Test Lamp with care since the IR gold-plated reflector lamp has fragile elements that can be damaged or broken if mishandled.
- 3. Always keep the Test Lamp turned OFF when not is use in order to conserve the battery charge and extend the life of the reflector lamp.
- 4. When charging the Test Lamp, make certain that the pushbutton switch pressed OFF or the battery will not charge.
- 5. A fully charged Test Lamp typically should supply sufficient radiant energy up to 20 detectors.



Fire Sentry Corporation (FSC) TL-2055 Explosion-Proof Test Lamp

Approved Label

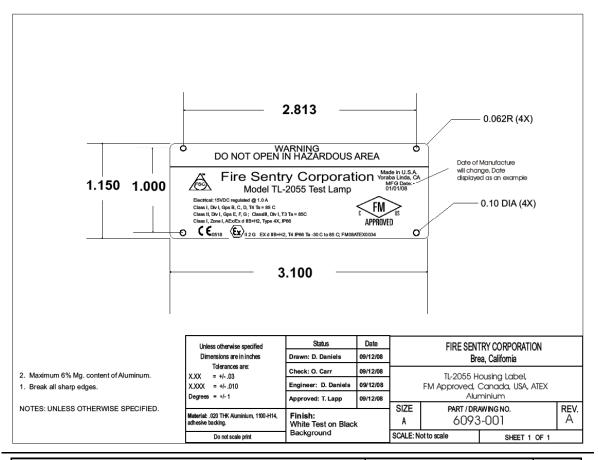

Title	Number	Date
Electrical apparatus for explosive gas atmospheres – Part	EN 60079-0	2006
0: General requirements		
Electrical apparatus for explosive gas atmospheres – Part	EN 60079-1	2004
1: Flameproof enclosure 'd'		
Degrees of protection provided by enclosures	EN 60529	1991
(IP Code)	+A1	2000

Spare Parts:

Battery Pack, 12 VDC
 P/N: PW-3123-0005
 110/220 VAC Wall Charger
 IR Gold-plated Reflector LampP/N: LAMP-3135-0002

Note: This specification subject to change without notice.